



Disconnect battery from machine
Wipe screen with disinfectant
Dry wipe the screen immediately
Wrap in protective barrier film

Liquid inside the casing will fry the circuit board permanently.
NEVER SOAK BATTERIES