


Disassemble the machine and remove needles.

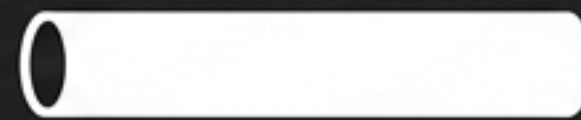

**Autoclave the tube
and metal grip.**

**Wipe the frame with
disinfectant wipes.**

Lubricate the armature bar with oil.

Regular maintenance and careful cleaning prevent cross-contamination and rust.

DISINFECT ALL MACHINE COMPONENTS