Leave space between pouches.

Steam must circulate freely.

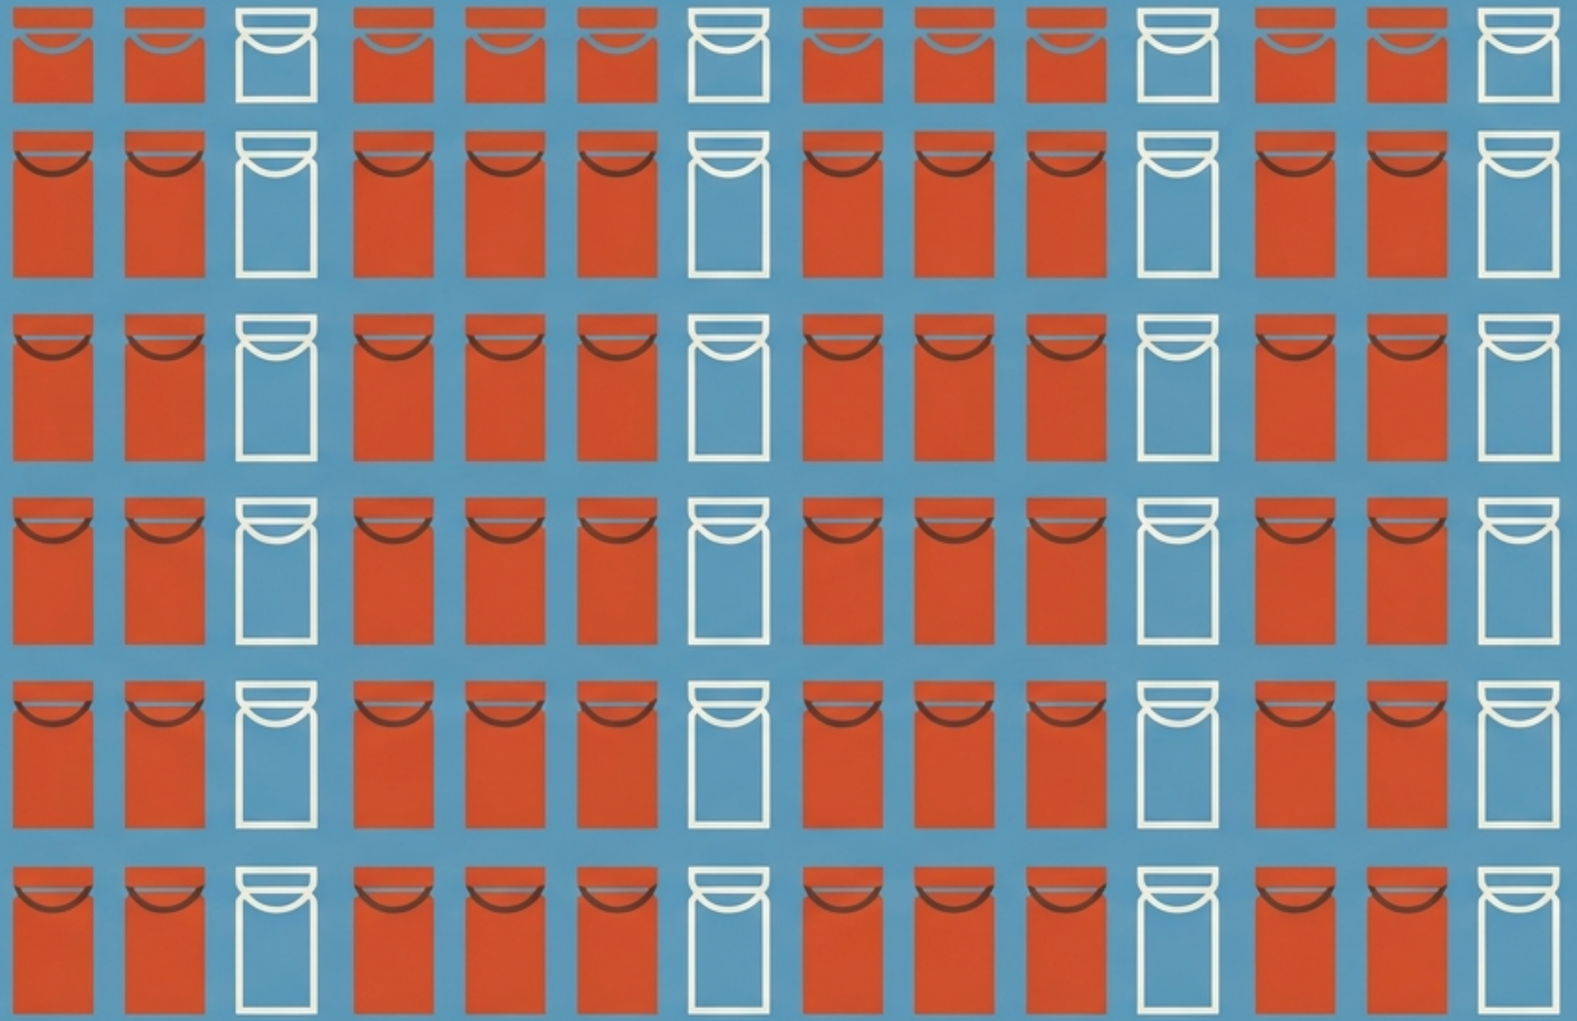

Maximum chamber load.

75 percent.

Overloading the chamber prevents steam from reaching sterilization temperature.

Never stack pouches flat against each other.