


- 1: Seamless procedure chair
- 2: Arm's reach handwashing sink
- 3: Physical decontamination separating wall
- 4: Instrument soaking deep sink
- 5: Ultrasonic cleaner
- 6: Autoclave load side
- 7: Three metre floor area

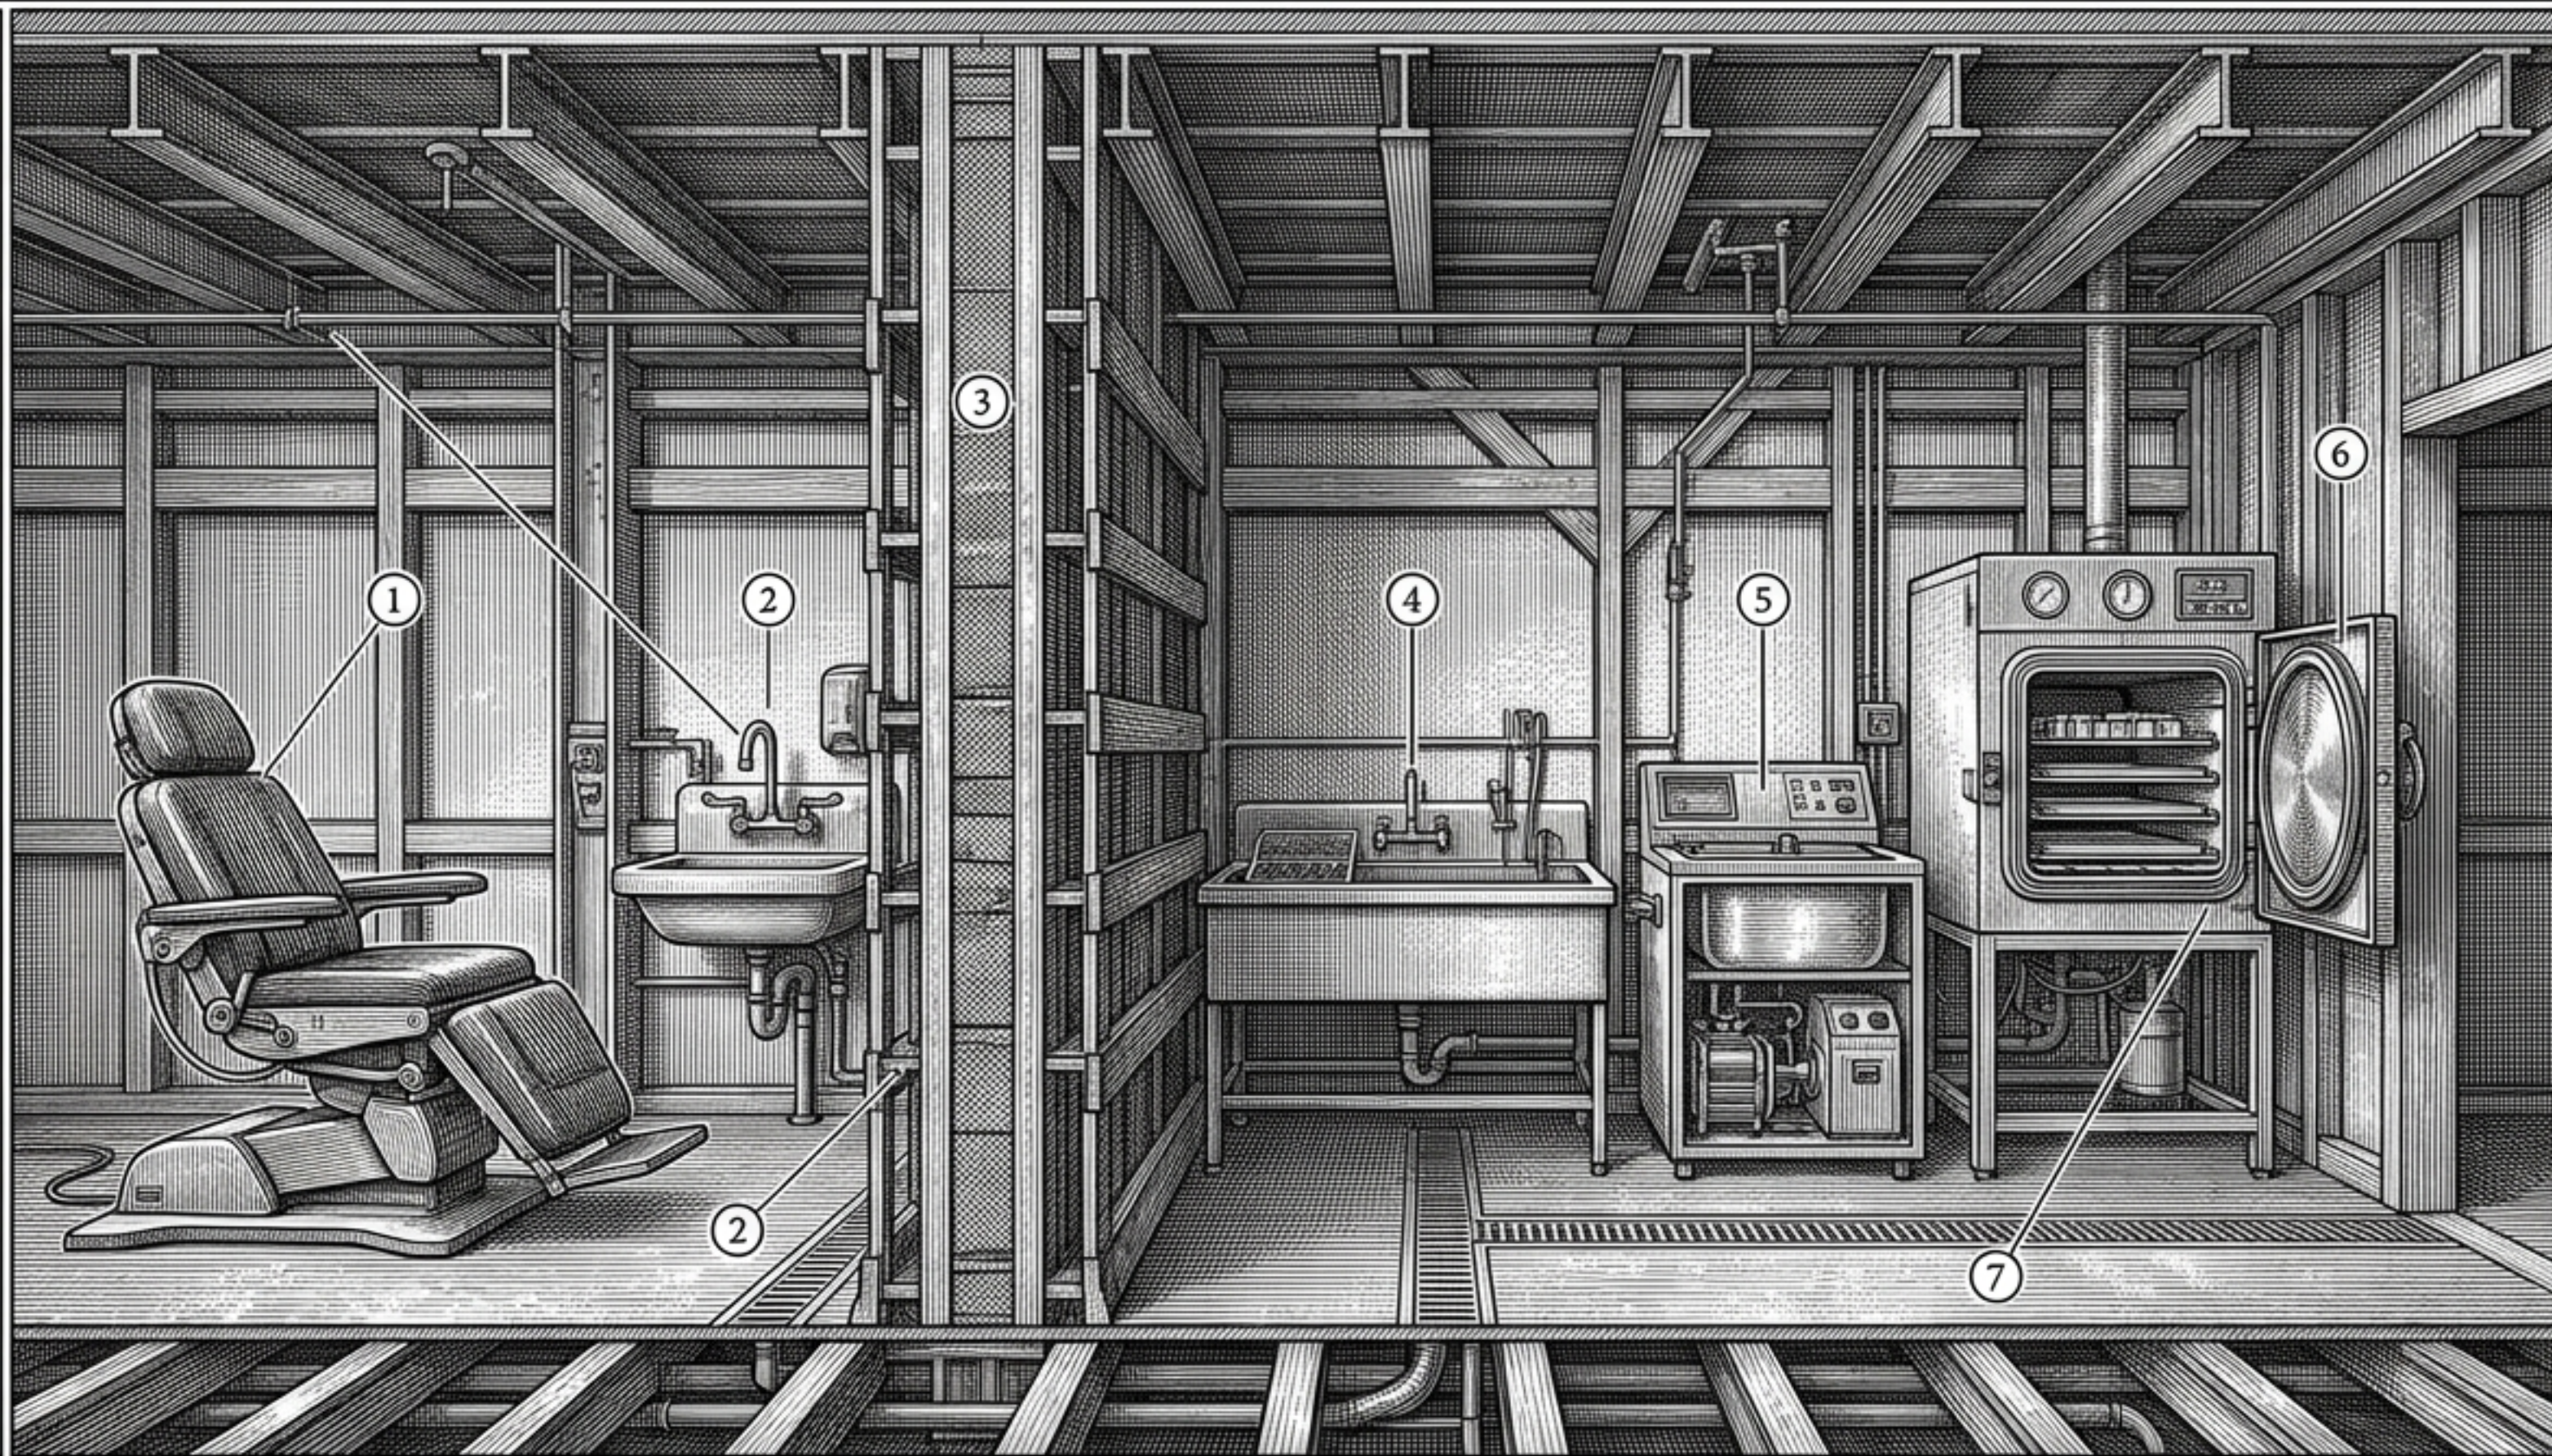

Workflow design eliminates unnecessary movement and physical contact with contaminated spaces.

ROOM LAYOUT AND TRAFFIC